



Spare part list

Item No. Designation

- 03020 Toilet seat (Ring and lid with fixing screws)
- 03021 Cover lid (excl. Toilet seat 03020)
- 03441 Foot pedal (plastic)
- 03445 Foot pedal (stainless)
- 03601 Bag holder (for Podium 03600)
- 03500 Feeding mechanism

Consumables

- 04001 Flush foil Type A
- 04010 Collecting bag Type A

MANUAL PACTO[®] Toilet



www.danfo.com



DANFO AB

P.O. Box 103 • SE-713 23 Nora, Sweden
Tel. +46 587-86100 • Fax +46 587-10602
www.danfo.com • info@danfo.com

TABLE OF CONTENTS

Page	No.	Designation
1	-	Read this before installation
2-3	-	Start-up
3	-	During usage - Capacity
4	-	Emptying procedure
5	-	Trouble shooting
6	-	Spare part list - List of consumables

<u>Trouble shooting</u> <u>Fault</u>	<u>Possible cause / Action to be taken</u>
<ul style="list-style-type: none"> • Bad smell in the toilet area 	Check that the ventilation is correctly installed.
<ul style="list-style-type: none"> • The waste does not disappear into the Collecting container. 	The collecting container is probably full. Empty the collecting container.
<ul style="list-style-type: none"> • Leakage of urine/faeces into the Collecting container. 	Check the “starting knots”. Are they tight enough? The flush foil may also have been damaged. Check the rest of the flush foil for still more holes. Check that there are no sharp edges underneath the cover lid, which may damage the foil.
<ul style="list-style-type: none"> • The Flush foil does not feed down when the foot pedal is pressed down 	The foot pedal may be damaged.
<ul style="list-style-type: none"> • The flush foil is pulled down obliquely when flushing 	Check that <u>both</u> wheel pairs grip the flush foil.

Emptying procedure

It is recommended to empty the collecting container after about 40 flushes (see section Capacity on page 3)

1. Remove the Cover lid with the seat from the toilet.
2. Pull up fresh Flush foil from the cassette and cut it off.
3. Tie a secure knot and press the Foot pedal until the knot has disappeared into the Collecting container.
4. Remove the Step Area in the front of the Podium.
5. Grip the front of the toilet and lift/pull it forwards into its stop position.
6. Lift the back of the toilet upwards/forwards until the chain is completely extended.
7. Tie a knot into and remove the collecting bag.
8. Insert a new collecting bag.
9. Put down the toilet and push it back into its closed position.
10. Re-place the Step Area on the Podium .
11. Pull out fresh Flush foil from the cassette and tie two knots.
12. Press the Foot pedal, push the knots between the bottom jaws and make sure that both pairs of feeding wheels grip the foil.
13. Re-place the Cover lid with the seat on the toilet, which now is ready to be used again.



How to empty latrin waste from Podium.

Read this before installation and use of the PACTO Toilet

The text "STOP" in the "funnel" indicates the end of the flush foil. A new flush foil cassette has to be inserted.

Do not allow the collecting box be too full. Check this by removing the step area of the podium.

Keep the surface of the podium dry. A wet surface may be slippery.

Service and maintenance

The movable parts of the feeding mechanism (not the feeding rollers) shall be greased at least once a year.


Dimensions (mm)

	Toilet	Podium
Depth:	484	817
Width:	483	560
Height:	380 ^{*)}	219
Weight:	16 kg	20 kg

*) sitting height

Start-up

1. **Assemble** the toilet according to instructions on labels in the toilet and the picture below.

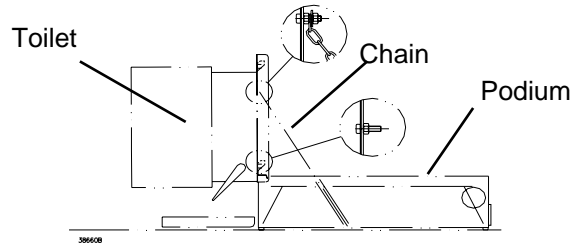

2. Make sure that sufficient ventilation is installed.
3. Insert the Collecting bag (which comes with the Flush foil) into the bag holder as follows:
 - Remove the Cover lid with the toilet seat
 - Remove the step area of the podium.
 - Grip the front of the toilet and lift/pull it forward into its stop position.
 - Lift the back of the toilet forward until the chain is completely extended..
 - Insert the Collecting bag into the bag holder.
 - Put down the toilet and push it back into its closed position.
 - Re-place the cover lid and the toilet seat.
 - Re-place the Step Area on the podium .

4. Insert a **flush foil cassette** as follows:

- Remove the Cover lid with the toilet seat and insert a Flush foil cassette into the toilet. Remove the strings keeping the cassette together.
- Pull up the flush foil from the outside and tie two knots in the end of the flush foil
- Press the foot pedal to open the bottom jaws. Press the end of the cassette with the two knots between the pinch wheels. Press the foot pedal and make sure that both pairs of feeding wheels grip the flush foil.
- Re-place the cover lid with the toilet seat on the toilet which now is ready to be used.

During usage

At the end of the flush foil there is a red **"STOPP"** mark indicating that the foil comes to its end. Since this is a manual toilet without a counter, the people using it will have to be observant of when it is time to empty the collecting container. When using a podium, this is easily checked by lifting the step area in front of the podium.

Capacity

Test show that the capacity of the toilet cannot be measured by the number of toilet visits but by the weight of the waste in the collecting bag, since this has to be easily removed from the podium.

Measured weights

40-50 flushes/visits = 8-10 kg (2 adults and 2 children).